

Flash Model	Camera Type	Item No	Compatible Cameras	
			Digital SLR Cameras & System Cameras	Digital Prosumer Cameras
DAF-34 DAF-34 „P“ DAF-42 „P“ DAF-44 Wi DCF-50 Wi DCF-52 Wi DMF-15 Combi „P“ TTL Flash	CANON	370907 370911 371101 371061 371050 371070 371180 371131	5D, 10D, 20D, 30D, 300D, 350D, 400D, 40D, 450D, 1000D, 50D, 5D Mark II, 1D Mark III, 500D, 7D, 550D, 60D, 600D, 1100D, 650D, 700D, 100D, 70D, 5D Mark III, 1200D, 7D Mark II, EOS M, EOS M2, 750D, 760D	PRO 1, G7, G9, S5 IS, G10, SX10 IS, SX1 IS, SX20 IS, G11, SX30 IS, G12, SX40 HS, G1 X, G15, SX50 HS, G1X Mark II, SX60 HS, G3X, G5X
DAF-34 DAF-34 „P“ DAF-42 „P“ DAF-44 Wi DCF-50 Wi DCF-52 Wi DMF-15 Combi „P“ TTL Flash	NIKON	370908 370912 371102 371062 371051 371071 371181 371132	Nikon D3, D3X, D300, D200, D80, D70, D70s, D50, D40, D40x, D60, D700, D90, D5000, D300S, D3000, D3100, D7000, D5100, D3200, D600, D800, D7100, D5200, D5300, Df, D3300, D810, D750, D5500, D7200	Nikon Coolpix Coolpix 8700, Coolpix 8800, Coolpix P6000, Coolpix P7000, Coolpix P7100, Coolpix P7700 (1), Coolpix P7800
DAF-34 DAF-34 „P“ DAF-44 Wi DCF-52 Wi DMF-15	SONY/ MINOLTA	370903 370913 371063 371072 371182	Sony Alpha A100, A200, A300, A350, A700, A900, A330, A380, A550, A850, A290, NEX-7, SLTA33, SLT-A55, A580, SLT-A35, SLT-A65, SLT-A77, SLT-A57, SLT-A37, DSC-HX400V	Konica Minolta DiMAGE A1, DiMAGE A2, DiMAGE A200, DiMAGE Z2, DiMAGE Z50
DAF-34 DCF-52 Wi DAF-44 Wi DMF-15	Sony MIS	370909 371079 371069 371189	NEX-6, SLT-A58, SLT-A99/A99V, A77 II, A3000, A6000 Full Frame A7, A7R, A7S, A7II	
DAF-34 „P“	PENTAX/ SAMSUNG	370914	Pentax *is D, *is DL, *is DL2, *is DS, *is DS2, K100D, K100D Super, K110D, K10D, K200D, K20D, K-m, K-7, K-X, K-5, K-r, K-30, K-01, K-50, K-3, K-S1, K-S2, K-3 II Samsung GX-1S, GX-1L, GX-10	
DAF-34 DAF-42 „P“ DAF-44 Wi DCF-52 Wi DMF-15	OLYMPUS/ PANASONIC	370906 371105 371065 371074 371184	Olympus E-1, E 3, E-300, E-330, E-410, E-500, E-510, E-520, E-420, E-620, E-30, E-P1, E-P2, E-PL1, E-PL2, XZ-1, E-PL3, E-PM1, OM-D E-M5, E-P3, XZ-2, OM-D E-M10, OM-D E-M1, E-PL7 Panasonic DMC-L10, DMC-L1, DMC-FZ50, DMC-LX3, DMC-G1, DMC-GH1, DMC-GF1, DMC-G2, DMC-G10, DMC-FZ100, DMC-LX5, DMC-GH2, DMC-GF2, DMC-G3, DMC-FZ150, DMC-GX1, DMC-LX7, DMC-G5, DMC-GX1, DMC-GH3, DMC-G6, DMC-GX7, DMC-FZ30, FZ200, DMC-FZ1000, DMC-GH4, DMC-GM5, DMC-LX100, DMC-FZ300	Olympus C-750UZ, C-770UZ, C-7070WZ, C-5000Z, C-5050Z, C-5060Z, C-8080WZ
DAF-34 DCF-52 Wi	FUJIFILM	370910 371078	X20, X-E1, X-30, X-M1, X-E2, X-T1, X100S, X-T10, X100T, X-A2	